


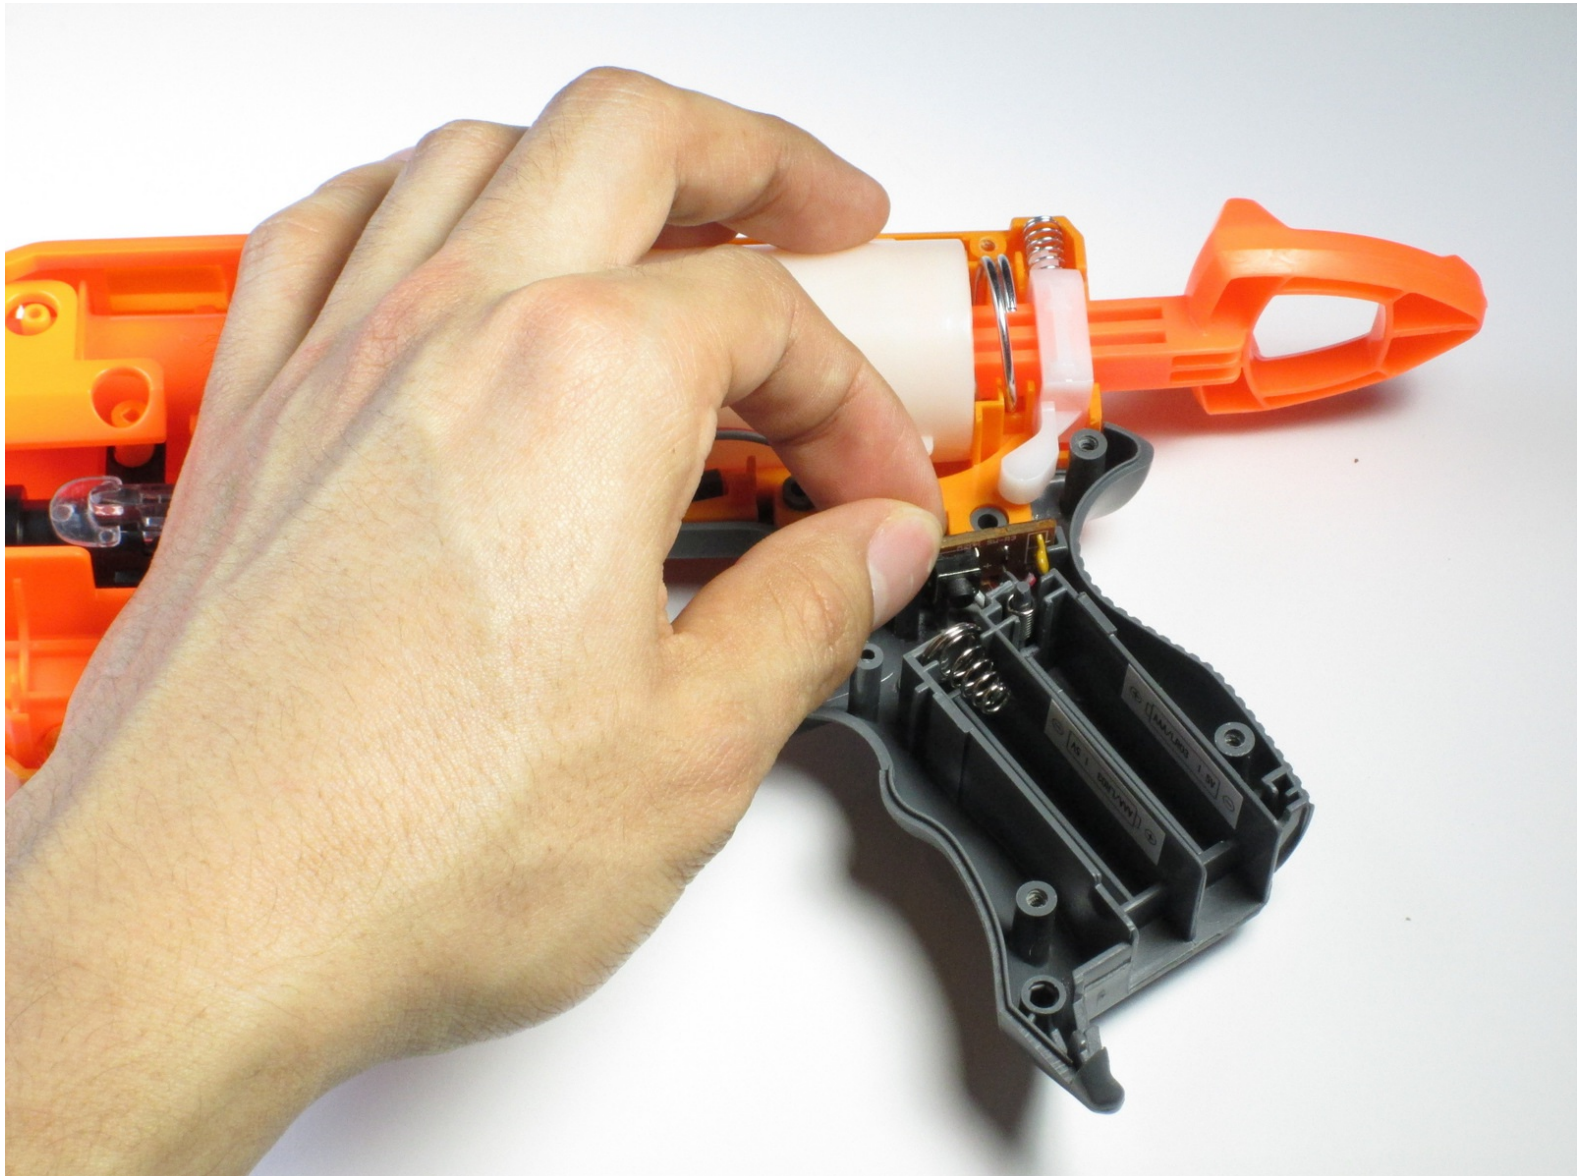

Nerf N-Strike Firestrike Laser Assembly Replacement

This guide will show you how to remove the entire laser assembly.


Written By: Hayes Kimball



INTRODUCTION

You will be able to disassemble the Firestrike and remove the laser assembly. You will need nothing other than a number 1 Phillips screwdriver and your hands. This guide can be completed anywhere and is relatively straight forward.

Step 1 — Battery

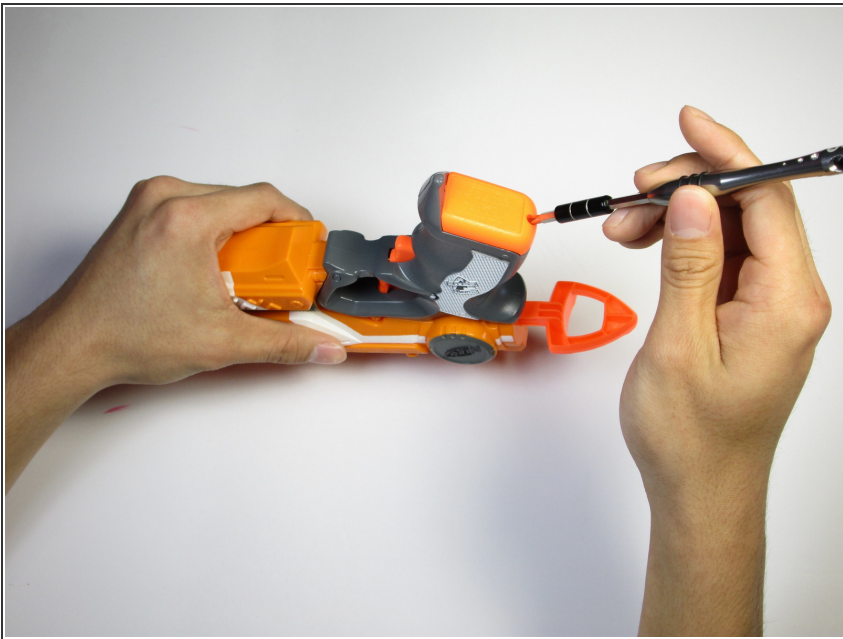


- Remove the 10mm chrome Phillips screw that is holding the battery plate using a #1 Phillips Screwdriver, and remove the battery cover using your hands.

Step 2



- Slide out the two AAA batteries using your fingers.

Step 3 — Blaster Casing

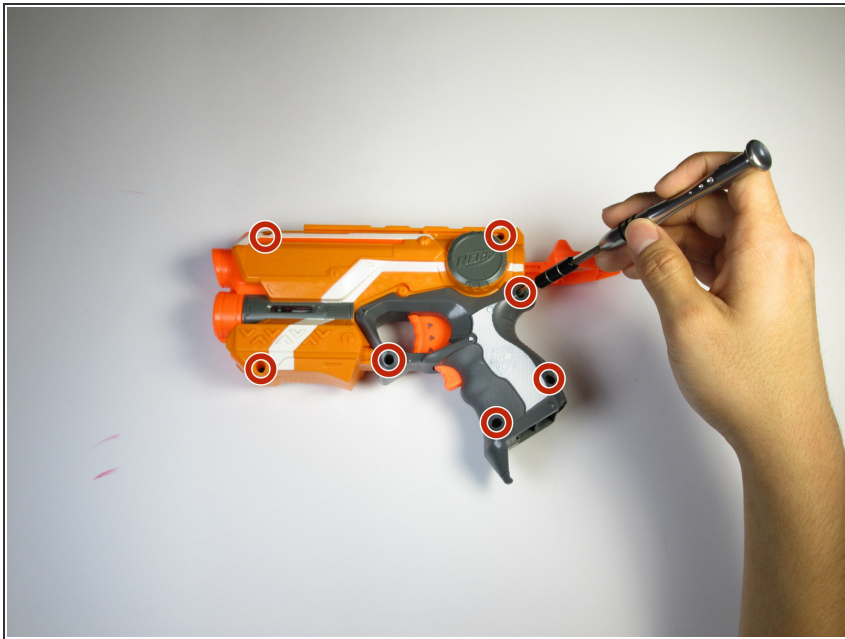


- Remove the seven 10mm black phillips screws from the blaster casing with a #1 Phillips Screwdriver.

Step 4



- Slowly pull apart the blaster casing, starting at the battery location.
- Keep pulling apart slowly until it separates completely. Be cautious as to not send the internal components flying.

Step 5

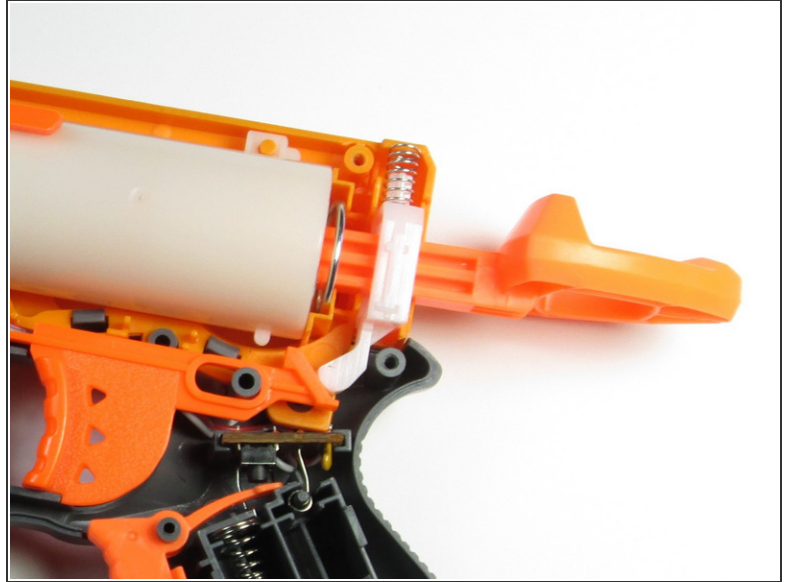


- ☒ For reassembly, ensure that the chrome nut gets put back in the proper location, signified by the red box.
- ☒ For reassembly, ensure that all the parts are lined up correctly on the dowels, signified by the four orange boxes.
- ☒ For reassembly, note the location of the springs as highlighted in the second photo.

Step 6 — Laser Trigger



- Remove the laser trigger by grabbing the trigger with your fingers and pulling it up and out.

Step 7 — Firing Trigger

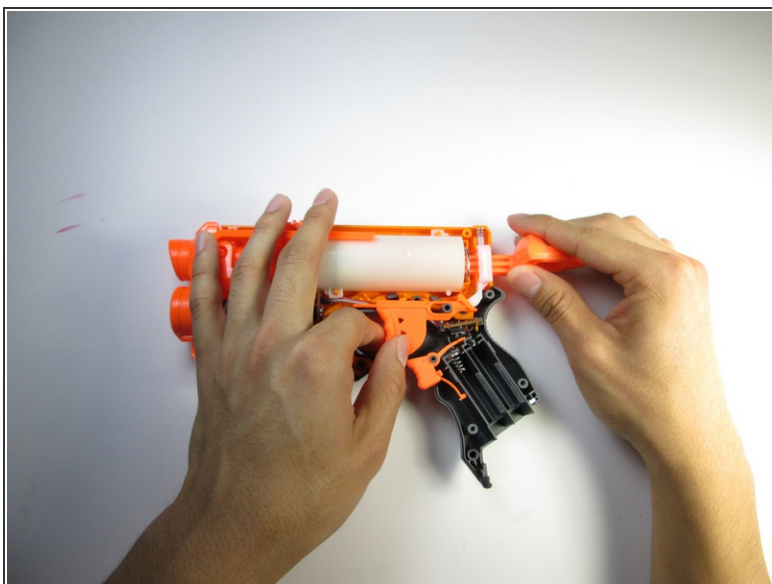


- Remove the firing trigger by grabbing the trigger with your fingers and pulling it up and out.


Step 8 — Laser Assembly



- Gently pull up on the circuit board located near the gun handle until it is separated from the gun.

 The wire that attaches to the circuit board is also attached to the laser. Be cautious to not pull so hard as to rip out the wire.

Step 9

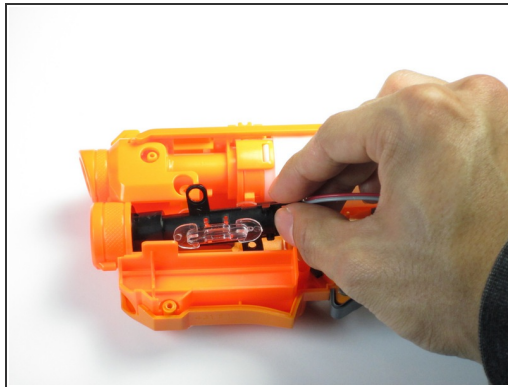

- Grab the circuit board located at the base of the laser and rotate towards the ammo compartment on the blaster until the guide hole is clear of the guide pin. Then slide the laser assembly out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 04:03:27 PM.